

# User Manual

# MP 22 Media Player



Minimum  
Maximum Usage




# Safety instructions

When using this electronic device, basic precautions should always be taken, including the following:

- 1 Read all instructions before using the product.
- 2 Do not use this product near water (e.g., near a bathtub, washbowl, kitchen sink, in a wet basement or near a swimming pool etc).
- 3 Use this device when you are sure that media player has a stable base and it is fixed securely.
- 4 This product, in combination with loudspeakers and amplifier may be capable of producing sound levels that could cause permanent hearing loss. Do not operate for a long period of time at a high volume level or at a level that is uncomfortable. If you experience any hearing loss or ringing in the ears, you should consult with otorhinolaryngologist.
- 5 The product should be located away from heat sources such as radiators, heat vents, or other devices that produce heat.
- 6 The product should be connected to a power supply that is described in the operating instructions or are marked on the product.

- 7 The power supply should be undamaged and never share an outlet or extension cord with other devices. Never leave device plugged into the outlet when it is not being used for a long period of time.
- 8 Care should be taken that objects do not fall into liquids and liquids would not be spilled on the device.
- 9 The product should be serviced by qualified service personnel if:
  - The power supply or the plug has been damaged.
  - Objects have fallen into or liquid has been spilled on the product.
  - The product has been exposed to rain.
  - The product has been dropped or the enclosure damaged.
- 10 There are some areas with high voltage inside, to reduce the risk of electric shock do not remove cover of the microphone receiver or power supply. The cover should be removed by the qualified personnel only.

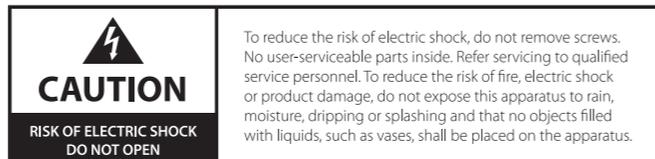

# Table of contents

## Before you start

|                   |   |
|-------------------|---|
| Introduction..... | 2 |
| Features.....     | 2 |

## Operation

|                             |   |
|-----------------------------|---|
| Front panel .....           | 3 |
| Rear panel.....             | 3 |
| Remote control.....         | 4 |
| Front panel operation.....  | 5 |
| Rear panel operation.....   | 6 |
| Media player operation..... | 7 |

## Specifications

|                             |   |
|-----------------------------|---|
| General specifications..... | 8 |
|-----------------------------|---|

# Before you start

MP 22 is a double media player for two zone audio installations. It features compressed audio playback, Bluetooth, FM radio and two zone paging capabilities with the addition of AMC TALK Z2 microphone desk stand. It is a flexible media player for places that constantly use multiple audio sources and need to switch them easily between two zones.

## FEATURES

- Compressed audio playback
- Supports up to 32GB USB flash and SD cards
- 2 Media players with SD/USB reader, FM radio and Bluetooth audio interface
- Two-zone paging with the addition of AMC TALK Z2 microphone desk stand
- 2 RCA stereo line inputs
- 3.5 mm plug AUX input
- Balanced stereo Phoenix outputs
- Stereo RCA AUX input
- IR remote control


# Operation

## Front Panel



1. Power switch
2. Track skip buttons
3. Play/Pause
4. Media player mode
5. AUX input
6. Output source selector
7. Output volume
8. Output tone controls
9. Player 2 with identical controls to Player 1

## Rear Panel

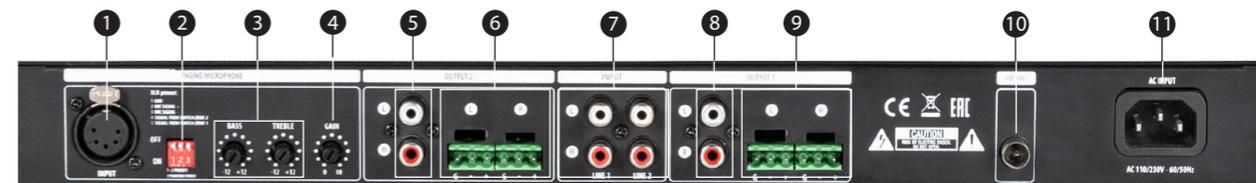


1. 5-pin XLR input for paging microphone
2. Priority and phantom power dip-switches
3. Microphone tone controls
4. Microphone gain
5. Player 2 RCA output
6. Player 2 balanced Phoenix output
7. RCA Line 1 & Line 2 inputs
8. Player 1 RCA output
9. Player 1 balanced Phoenix output
10. FM antenna connector
11. Mains power connector

# Operation

## Remote control

To select which media player will be controlled, press player selector button (10).

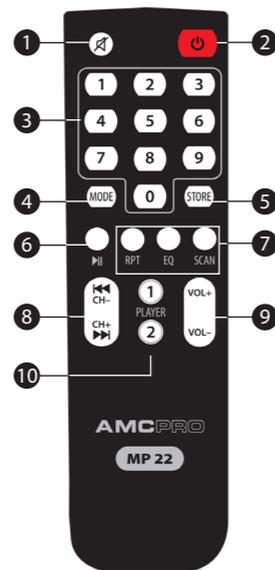

1. Media player mute | 2. Media player power ON / OFF | 3. Numeric keypad | 4. Media player mode select | 5. Store | 6. Play / pause  
7. Repeat, Equalizer and Scan buttons | 8. Track skip buttons | 9. Media player volume | 10. Media player selector

## Changing batteries

1. Open the battery cover on the back of the remote control
2. Insert two AAA batteries as marked inside the remote control battery compartment
3. Close the battery cover

# Operation

## Front Panel Operation

### POWER SWITCH

Switch MP 22 power ON / OFF.

### SD / USB SOCKETS

Media player supports up to 32 GB flash storage.

### LED SCREEN

LED screen displays main information about media player status: track number and playing time, media player volume level.

### PLAY/PAUSE

Start or pause player.

### TRACK SKIP BUTTONS

Short press of track skip buttons will change currently playing track to previous or next track.

Long press will adjust media player volume.

### MODE

Change media player source between SD / USB / FM radio / Bluetooth.

### INPUT SELECTOR

Select audio source for output.

### AUX INPUT

3.5 mm jack connector for external audio source.

### VOLUME CONTROL

Rotary knob for adjusting output level.

### BASS & TREBLE TONE CONTROLS

Tone controls provide attenuation of bass and treble response. The flat position is obtained when the knobs are set to the middle. Turn the knob clockwise to raise tone level +12 dB; turn counter-clockwise to lower tone level by -12 dB.

# Operation

## Rear Panel Operation

### PAGING MICROPHONE INPUT


5-pin XLR connector for paging microphone and AMC TALK Z2 paging station.

PAGING MICROPHONE INPUT PINOUT 5-PIN XLR CONNECTOR:


1. GND | 2. MIC audio signal + | 3. MIC audio signal -
4. Zone 2 trigger | 5. Zone 1 trigger

APPLICATION CIRCUIT DIAGRAMS:


Microphone is muted in both zones

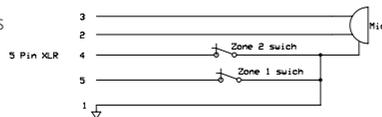

Microphone is muted in zone 2

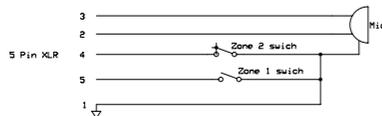

Microphone is muted in zone 1

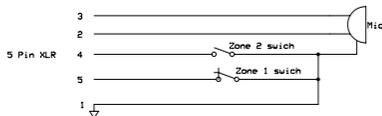

### PRIORITY AND PHANTOM POWER SWITCHES

Set paging microphone input priority for outputs 1 & 2. When using condenser microphones, switch ON phantom power.

### MICROPHONE GAIN AND TONE CONTROLS

Adjust paging microphone sensitivity, bass and treble response.

### OUTPUT CONNECTORS

Balanced Phoenix connectors in parallel to stereo RCA for connecting MP 22 to the amplifier.

### LINE INPUTS

Stereo RCA connectors for external sound sources.

### FM ANTENNA

FM radio antenna connector.

### MAINS POWER INPUT

Connect device to mains power supply using provided power cable.

# Operation

## Media Player Operation

SD / USB PLAYER

### PLAYING MEDIA FROM SD / USB

Press PLAY button to play or pause player.  
Press track skip buttons to select next or previous track.  
Press RPT button on the remote to repeat ONE track, or ALL tracks.

FM RADIO

### AUTO-SEARCH RADIO STATIONS

Press and hold PLAY button on front panel or SCAN button on the remote to automatically search all available radio stations. Stations are stored in presets.

### NAVIGATING PRESETS

After auto-search, press track skip buttons on the front panel or CH- / CH+ buttons on the remote to navigate between stored station presets. Digital keypad also can be used to navigate stored presets.

### MANUALLY STORE RADIO STATION PRESET

Press Play button (if using IR remote control press Store button) – LCD screen now blinks FM frequency.  
Enter FM frequency using numeric keypad or track skip buttons.  
Press Play (if using IR remote control press Store) to confirm frequency - LCD screen now blinks FM preset number. Choose preset number using numeric

keypad or track skip buttons.  
Press Play (if using IR remote control press Store) button to confirm and save.

### DELETE FM RADIO STATION PRESETS

To delete all FM radio presets, start the FM radio scan and press MODE button. This action completely clears FM radio memory and all saved station presets.

BLUETOOTH

### PAIRING

In Bluetooth mode, MP 22 becomes ready to pair with another devices. When no device is connected, screen blinks word BLUE. Search for "AMC Player 1" and "AMC Player 2" on your device respectively for player 1 & player 2. When connected, screen stops blinking and confirmation sound is played.

Next time MP 22 will automatically connect to your device when Bluetooth mode is selected. You may still need to select "AMC Player 1" or "AMC Player 2" as music output on your device.

### UNPAIRING

Press and hold PLAY button on the front panel for a player that needs to be unpaired from Bluetooth device.

### CONTROL

Use track skip and PLAY buttons to select track and start/pause playing on your connected Bluetooth device. This function may not work on every device.

# General Specifications

## MP 22

|                   |   |
|-------------------|---|
| Power consumption | 10 W  |
| Power supply      | 115 V or 230 V, 50/60 Hz  |
| Output level      | Main: 6 dBu<br>Link: 0 dBu  |
| Microphone input  | Sensitivity: 56 dBu, impedance: 600 $\Omega$  |
| Line input        | Sensitivity: 0 dBu, impedance: 4,7 k $\Omega$   |
| Aux input         | Sensitivity: 0 dBu, impedance: 4,7 k $\Omega$ ,   |
| Phantom power     | +48 V   |
| Media player      | Radio station memory: 32 stations<br>Max. USB flash or SD card size: 32 GB                  |
| Antennas          | FM antenna: monopole BNC connector,<br>Bluetooth antenna: internal, working distance > 10 m |

|                    |  |
|--------------------|--|
| Frequency response | 20 Hz – 20 kHz   |
| THD                | 0.10 %   |
| Tone control       | Bass: 100 Hz $\pm$ 12 dB<br>Treble: 10 kHz $\pm$ 12 dB |
| Remote control     | IR remote  |
| Dimensions         | 483 mm $\times$ 103 mm $\times$ 44 mm                  |
| Weight             | 1.7 kg   |

The specifications are correct at the time of printing this manual. For improvement purposes, all specifications for this unit, including design and appearance, are subject to change without prior notice.